

## ARCTIC INSTALLATION TIPS




**Joint Width;** The Arctic collection has been designed to be installed with either a dry joint or an 8-12mm mortar/grout joint. When applying the stones use timber or plastic dowels/wedges to keep the joints evenly spaced. Due to the nature of the product stones will vary in size and may need extra wedges to allow for height variation.

**Dry joint installation tip:** If installing with dry joints please ensure either the wall or adhesive are a dark colour before starting. This can be done by purchasing a dark tile adhesive or tinting mortar with black oxide (check with your local glue supplier). This will help cast a shadow between stones giving a solid dry stone look. The pattern will not line up to the millimetre, **you will need off cuts and thin cut stones to fill the voids between the stone once the pattern has been laid.**


**FOR BEST END RESULTS INSTALL THIS PRODUCT 'FREE FORM' PULLING STONES OFF WEBBING LAYING RANDOM.**

**Individual stones are held together with flexible webbing. Please specify if webbing isn't required when placing order.**

- STEP 1:
- If your application requires corners, apply these first alternating the long & short return in opposite directions
  - Cut or trim stones using a wet saw or angle grinder with a diamond blade attached.
  - Lay 1st layer of product at the base of wall in packaged re-occurring pattern.
  - Draw a straight line across the 1st layer of stones then cut
  - Apply cut stone to wall in packaged re-occurring pattern.

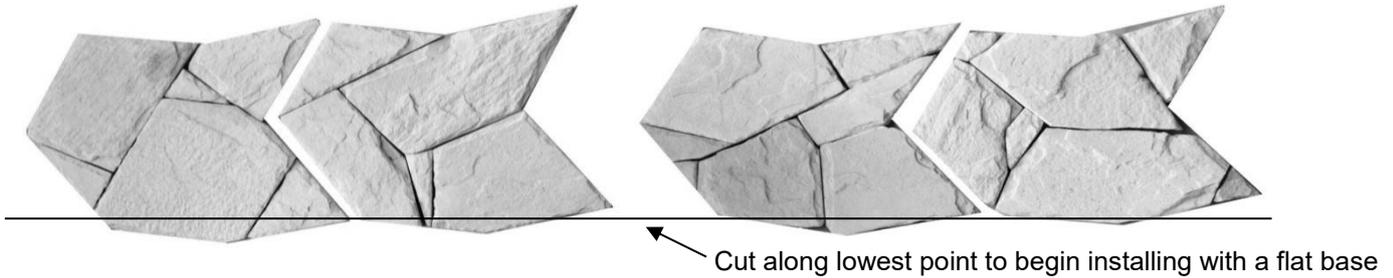

- STEP 2:
- Trim sides as installing further up the wall

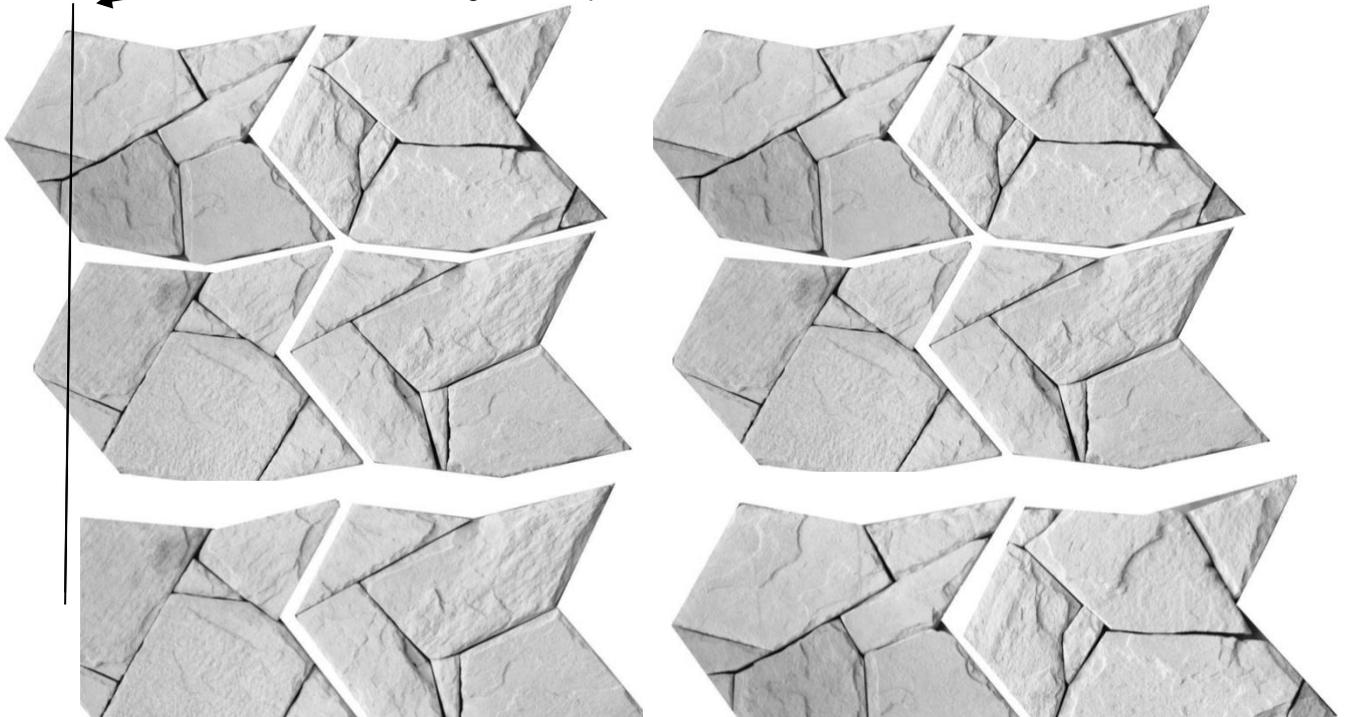

- STEP 3:
- Installing with Dry joint:** Take time once the pattern is laid to cut thin stones to fill small gaps between the larger joints. This is very important, it will break up the pattern and provide the perfect hand crafted stone masonry look

**Installing with Mortar joint:** Pointing mortar or tile grout can be used to fill the joints. One of the easiest & fastest ways to fill the joints is with a piping bag. Purchase your silicon piping bag from Veneer Stone by calling 1300984572 or email [info@veneerstone.com.au](mailto:info@veneerstone.com.au)

To retain the original fresh quarried look we suggest sealing the stone. If you would like the stone to mellow slightly and gain the European look after years of harsh weathering don't seal the product.

For more information visit our website at [www.veneerstone.com.au](http://www.veneerstone.com.au) or call 1300 984 572